

# Setup instruction

## Fully programmable loop powered 4 digits LED display

Type LPI-01, LPI-02



INDICATOR PARAMETERS		CONFIGURATION	
LPI-01 and LPI-02 are programmable displays designed for current loops of 4-20 mA. LPI-01 and LPI-02 are powered from the loop and do not require any other supply. The devices can be configured by setup menu to display physical value measured by the sensor. The displays LPI-01 and LPI-02 do not work with HART's protocol, they are transparent for him.		<b>To enter menu press E button for 2sec. Press ↓ or ↑ button to change STEP position</b>	
Lp.	Displayed text	Description	
S T E P 1		<b>Setting decimal point DP</b> 1. Press E button 2. Press the button ↓ or ↑ to change decimal position: - 1234 (set value 0) without decimal point - 123.4 (set value 1) - 12.34 (set value 2) - 1.234 (set value 3) 3. Press E button	
<b>TECHNICAL PARAMETRIC</b>		<b>Setting low limit for 4mA „ZErO”</b> 1. Press E button. 2. Press the button ↓ or ↑ to change the value between (-)1999 and (+)9999. <i>This value will be displayed at input current of 4mA (point low).</i> 3. Press again E button.	
<b>LP1-01</b>		<b>Setting high limit for 20mA „SPAn”</b> 1. Press E button. 2. Press the button ↓ or ↑ to change the value between (-)1999 and (+)9999. <i>This value will be displayed at input current of 20mA (point high).</i> 3. Press E button	
		<b>Setting overload limit „Li”</b> 1. Press E button 2. Press the button ↓ or ↑ to change the value a) Set „0” for range 4 mA - 20 mA, the display shows: - LO - when loop current < 4 mA - HI - when loop current > 20 mA b) Set „1” for range 3.6 mA - 20.4 mA, the display shows: - LO - when loop current < 3.6 mA - HI - when loop current > 20.4 mA 3. Press E button.	
<b>LP1-02</b>		<b>Setting sampling rate „St”</b> 1. Press E button. 2. Press the button ↓ or ↑ to change the sampling rate from 1 to 10 seconds (steps 1s). 3. Press E button.	
		<b>Setup engineering „Unit”</b> 1. Press E button. 2. Press the button ↓ or ↑ to select the unit: - nonE – for no unit on the display. - °C, °F, °K, %. <i>(Measurement cycle works on 6s. Value is displayed for 4s, the unit is displayed for 2s).</i> 3. Press E button.	
The connection diagram		<b>Exit from menu and save settings press ↓ and ↑ buttons at the same time (possible from each page).</b>	